

Folding Wagon



Contents

- (1) Folding Wagon
- (1) Fabric Canopy

- (1) Travel Sleeve

Use/Features

- Folding Wagon - wagon can support up to 120 lbs, can be used to transport sports equipment, beach accessories, groceries, etc.
- Fabric Canopy - provides shade and protection from the sun/elements and is removable
- Rear Basket - basket frame is incorporated in the wagon's frame so there is no chance of it getting lost

- Rear basket has removable fabric to aid in cleaning
- Travel sleeve for protection during transporting
- Folds to fit in almost any trunk

Care Instructions

To clean your folding wagon please remove any excess dirt or debris and use a damp cloth to clean. Do not use chemicals to clean this product.

Set-up Instructions



Step 1: Remove the folding wagon from the travel sleeve and make sure that the front and rear carrying handles are not secured together.



Step 2: Spread the front and rear frame sections apart and allow the folding wagon to come to a fully extended position.



Step 3 (optional): Extend the canopy support uprights from the frame.



Step 4: Place canopy over top of extended support uprights with the end cap situated in the cut out section of the plastic corner reinforcements. Do not insert extended support uprights inside of plastic corner reinforcements.



Step 5: (View from inside of wagon/canopy) Secure all 4 corners of the canopy. Note: Plastic corner reinforcements go on the inside of the canopy.



Step 6 (To fold the wagon): Push down canopy poles if extended. Pull loop in the center of the wagon bed straight up. Put handles together and velcro.

Caution

- Do not use for hot items like food, drinks, pans, grills, hot plates, etc.
- Do not load this wagon with more than 120 lbs.
- Use caution when folding and unfolding the wagon as there is a pinch hazard on the frame.
- Do not tow this product with a bicycle or motorized vehicle.
- This is not intended for use by children. Adult use, only.

Warranty

On The Edge Marketing offers a 90 day factory warranty on damaged or defective product. The warranty does not cover breakage during installation or basic wear. If a product is damaged during shipping, then OTEM must be made aware within 48 HOURS in order to file a claim with the carrier. Please contact a representative for Warranty information as it applies to each specific product category.

For replacement parts or missing pieces, please do not return this product to the retailer. Call 949.305.4830 for replacement parts.